

 
 



















| Original | Replacement |
|---|--|
|  Standby |  Power |
|  Monitor |  Media |
|  Tv/DVD |  TV/R |
|  T/C |  Subt |
|  Play Mode |  Shift + Play |
|  Rec Mode |  Shift + Rec |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Disc |  Menu |

| Original | Replacement |
|--|---|
|  System |  Smart |
|  Select |  Info |
|  Timer |  AV |
|  Tv Vol+ |  Vol + |
|  OK |  Ok |
|  Tv Vol- |  Vol - |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Scissors/FSS |  Options |
|  Return |  Back |
|  Clear |  Exit |
|  Play |  Play |
|  I<< |  I<< |





| | Original | Replacement | Original | Replacement |
|---|----------|---|----------|-------------|
|  | Stop |  | | |
|  | >>I |  | | |
|  | Audio |  | | |
|  | Rec/OTR |  | | |
|  | Pause |  | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

