




 



 

 

 

 





 

 

 



 
 
 

 







 



 

 





 

 

 


 





 
 




Original	Replacement	Original	Replacement
 Power	 Power	 -/-- / +10	 SHIFT + GUIDE Shift + Guide
 Mute	 Mute	 Recall / Program	 BACK Back
 Source	 AV AV	 TV Menu	 TOP MENU MENU Menu
 P Mode	 PICTURE FORMAT Format	 Exit	 CLEAR EXIT Exit
 S Mode	 SHIFT + SOUND DUAL Shift + Dual	 Goto / Text	 REPEAT TEXT Text
 Audio I / II	 SOUND DUAL Dual	 Display	 DISPLAY INFO Info
 Sleep	 PROG SLEEP Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK / Enter	 OK Ok
 5	 5	 V -	 VOL - Vol -
 6	 6	 V +	 + VOL Vol +
 7	 7	 P -	 CH - Ch -
 8	 8	 P +	 + CH Ch +
 9	 9	 Red / DVD	 A Red
 0 / 10	 0	 Green / A-B	 B Green





Original	Replacement	Original	Replacement
 Yellow / Angle	 Yellow		
 Blue / Repeat	 Blue		
 Subtitle	 Subt		
 Play / Pause /	 Play		
 Size	 3D		
 D.Dis / Reveal	 Smart		
 D.Menu / Mix	 D. Menu		
 Zoom / Index	 Shift + Eject		
 I<< / Fav	 I<<		
 I<< / Fav	 Pre Ch		
 >>I / Subpage	 >>I		
 Stop / Language	 Stop		
 << / Fav -	 <<		
 >> / Fav +	 >>		
 Eject / EPG	 Guide		
 Eject / EPG	 Eject		

