






 





 


 
 


 



 

 

 
 
 

 



 



 
 


 
 



 
 





















Original	Replacement	Original	Replacement
 Standby/On	 Power	 I<<	 I<<
 1	 1	 Play	 Play
 2	 2	 >>I	 >>I
 3	 3	 Time/Info	 AV
 4	 4	 Menu	 Menu
 5	 5	 Folder/Preset Up	 Up
 6	 6	 Folder/Preset	 Down
 7	 7	 Right File/A-E	 Right
 8	 8	 Left File/A-E	 Left
 9	 9	 Enter	 Ok
 0	 0	 Input Up	 Ch +
 Dimmer	 Media	 Input Down	 Ch -
 Prog	 Shift + Sleep	 Display	 Info
 Repeat/Freq/Text	 Text	 Sleep	 Sleep
 Pause	 Pause	 Vol+	 Vol +
 Stop/PTY Seek	 Stop	 Vol-	 Vol -
 Random/PTY Seek Start	 Smart	 CD	 Yellow





	Original	Replacement	Original	Replacement
	Tuner	TV/R		
	Band	Green		
	Tape/MD	Subt		
	AUX/TV	Red		
	Dock	Blue		

