

 




 



 











 

 
 
 

 


 





 


 
 

 
 
 
 
 

 
 
 
 
 
 


 


 

 


 
 




Original	Replacement	Original	Replacement
	Power		Power
	TV/DTV		Smart
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Info		Info
	FAV		Shift + Pre Ch
	Picture		Shift + Format
	Sound		Shift + Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I/II		Dual
	Still		Format
	Zoom		Eject
	Exit		Exit





Original	Replacement
Radio	SEARCH TV/R
Next	>>I
Lang	DISC NAV LIST
SubtItl	AD SUBT
Back	RETURN BACK
Forward	>>
Pause Play	PLAY MODE
Pause Play	II
Stop	■
Red	A
Green	B
Yellow	C
Blue	D
Text	REPEAT TEXT
PIP Size	ECO 3D
Swap Reveal	SETTINGS OPT
CH ▲ Cancel	SHIFT + CH +

Original	Replacement
CH V Mix	SHIFT + CH - Shift + Ch -
Source Sub Cntr	SHIFT + TIMER AV Shift + AV
Position Index	APP MEDIA Media
Sleep Hold	PROG SLEEP Sleep

