










 

 
 

 

 
 

 













 




Original	Replacement
 Standby	 Power
 DTV/VCR	 Smart
 Text	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 EPG	 Guide
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Setup	 Menu
 Exit	 Exit

Original	Replacement
 Source	 AV
 Tv/Radio	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right/FAV+	 Right
 Left/FAV-	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original	Replacement	Original	Replacement
9	9		
0	0		
RECALL	BACK		
GOTO	3D		
FAVORITE	PRE-CH		
MODE	MEDIA		
AUDIO	Shift + Dual		
LANGUAGE	Dual		
Red/Repeat	Red		
Green/A-B	Green		
Yellow/Zoom	Yellow		
Blue/Subtitle	Blue		

Original	Replacement	Original	Replacement

