 
 


 



 
 
 




 




Original		Replacement		Original		Replacement	
	Power DVD		Power		Prog/Check		Sleep
	Select Drive		Smart		I<< Skip		I<<
	1		1		Skip >>I		>>I
	2		2		<< Slow/Search		<<
	3		3		Slow/Search >>		>>
	4		4		Stop		Stop
	5		5		Play/x1.3		Play
	6		6		Pause		Pause
	7		7		i/Status		Media
	8		8		Exit		Exit
	9		9		Option		Options
	0		0		Return		Back
	Delete/*		D. Menu		Function Menu		Menu
	Input Select		AV		Direct Navigator		List
	CH/Page Up		Ch +		Guide		Guide
	CH/Page Down		Ch -		Up		Up
	ShowView		Pre Ch		Down		Down





Original	Replacement	Original	Replacement
 Right/II>	 Right	 CH+ Tv	 Shift + Ch +
 Left/<II	 Left	 CH- Tv	 Shift + Ch -
 OK	 Ok	 Vol+ Tv	 Vol +
 Red	 Red	 Vol- Tv	 Vol -
 Green	 Green		
 Yellow/Create Chapter	 Yellow		
 Blue/Manual Skip	 Blue		
 Rec	 Rec		
 Rec Mode	 Shift + Rec		
 EXT Link	 Text		
 Direct Tv Rec	 TV/R		
 Audio	 Dual		
 [≡◆]/STTL	 Subt		
 Display	 Info		
 Time Slip	 3D		
 Power Tv	 Shift + Power		
 AV Tv	 Shift + AV		

