
 


 


 
 


 

 


 



 

 



 
 







 
 

 

 
 
 


 
 
 





 


 


 
 
 

 



 






| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Timer/Prog. |  Sleep |
|  Input Select |  AV |  Time Slip |  Guide |
|  Open/Close |  Eject |  Setup |  Options |
|  1 |  1 |  Audio |  Dual |
|  2 |  2 |  Clear |  Exit |
|  3 |  3 |  Chapter Mark |  List |
|  4 |  4 |  Disc Menu |  D. Menu |
|  5 |  5 |  Top Menu |  Menu |
|  6 |  6 |  Return |  Back |
|  7 |  7 |  Display |  Info |
|  8 |  8 |  Up |  Up |
|  9 |  9 |  Enter |  Ok |
|  0 |  0 |  Down |  Down |
|  Prog+ |  Ch + |  Right |  Right |
|  Prog- |  Ch - |  Left |  Left |
|  Satellite Link |  Media |  I<< Skip |  I<< |
|  Mode |  Smart |  Skip >>I |  >>I |





| | Original | Replacement | | Original | Replacement |
|---|-----------------|---|---------------|---|----------------|
|  | << |  | << |  | 1.3x/0.8x Play |
|  | >> |  | >> |  | Green |
|  | Play |  | Play | | |
|  | Stop |  | Stop | | |
|  | Pause |  | Pause | | |
|  | HDD/DVD Rec |  | Rec | | |
|  | Variable Replay |  | Format | | |
|  | Variable Skip |  | 3D | | |
|  | >II/Adjust+ |  | Shift + Right | | |
|  | II</Adjust- |  | Shift + Left | | |
|  | DVD |  | Blue | | |
|  | HDD |  | Yellow | | |
|  | AV Select |  | Red | | |
|  | Rec Mode |  | Shift + Rec | | |
|  | Search |  | TV/R | | |
|  | Repeat |  | Text | | |
|  | Dubbing |  | Subt | | |

