



Original	Replacement
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
[=]	Text / Goto
Pause/[=]	Pause / Step / Freeze
Stop/[=+]	Stop / Hold
Rec/[=◇]	Rec / Rec Mode
<</[=o]	<< / Tune-
<</[=i]	<< / Preset-
>> /[=?]	>>  / Preset+
>>/[=x]	>> / Tune+
P.Mode	Picture / Format
S.Mode	Sound / Title
ANT	D.Menu / Top
Tools	Setup / OPT /
1	1
2	2

Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Menu	Menu / Home
0	0
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Home/Source	Shift + Menu / Home





Original		Replacement		Original		Replacement	
	Vol+		Vol+				
	APPS		Shift + Green / APP /				
	P+		CH+ / Page+				
	Vol-		Vol-				
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / -/--				
	List		Smart / List				
	FAV		Fav / Marker / PC				

