







 

 

 

 









 

 





 















 
 

 




 

 

 
 








Original	Replacement	Original	Replacement
	Power		Power
	[i+]		Info
	TV/DTT		Smart
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[> <]		Format
	White		Pre Ch
	I/II/[≡i]		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text
	[≡+]/Status		3D
	[...]		Subt
	[≡?]/Skip		Options
	Menu		Menu
	Guide		Guide
	Nothing 3		Shift + 3
	Exit		Exit









	Original	Replacement		Original	Replacement
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	Enter		Ok		
	Tv/Radio		TV/R		
	[+]		Eject		
	[≡o]/Q.View		Media		
	Nothing 1		Shift + 1		
	Nothing 2		Shift + 2		



 









	Original	Replacement	Original	Replacement
	Power			
	P+			
	P-			
	Up			
	Down			
	Right			
	Left			
	Enter			
	Menu			
	Pause			
	Play			
	Stop			
	<<			
	>>			
	I<<			
	>>I			







Original	Replacement	Original	Replacement
 Power	 Power	 Down	 Down
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Vol+	 Vol +		
 Vol-	 Vol -		
 P+	 Ch +		
 P-	 Ch -		
 Menu	 Menu		
 Up	 Up		

