 

























 



 
 



















 

 

| Original | Replacement |
|---|---|
|  Power |  Power |
|  TV / DTV |  Setup / OPT / |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Recall |  Back / Return |
|  0 |  0 |
|  Info |  Info / Angle |
|  FAV |  Fav / Marker / PC |
|  Picture |  Picture / Format |

| Original | Replacement |
|--|---|
|  Sound |  Sound / Title |
|  Vol + |  Vol+ |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Mute |  Mute / Dimmer |
|  CH - |  CH- / Page- |
|  Menu |  Menu / Home |
|  EPG |  Guide / EPG / -/- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  I / II |  Audio / Lang I/II |
|  Still |  Pause / Step / Freeze |
|  Zoom |  Zoom / Size |
|  Exit |  Exit / Cancel / Clear |





| Original | Replacement |
|--|---|
|  Radio / Browse |  TV/Radio / |
|  T.Shift / Rotate |  D.Menu / Top |
|  Lang / Page up |  Shift + Audio / Lang I/II |
|  Lang / Page up |  Shift + CH+ / |
|  Subtitle / Page down |  Subtitle / EQ |
|  Subtitle / Page down |  Shift + CH- / |
|  DMP |  Smart / List |
|  PVR |  Display / Media |
|  Play / Pause |  Play / Slow |
|  Stop |  Stop / Hold |
|  Red / <<< |  Red / Netflix / Search |
|  Red / <<< |  <<< / Tune- |
|  Green / >>> |  Green / APP / Repeat |
|  Green / >>> |  >>> / Tune+ |
|  Yellow / I<<< |  Yellow / YouTube / Repeat |
|  Yellow / I<<< |  I<<< / Preset- |
|  Blue / >>>I |  Blue / Prime Video / Random |

| Original | Replacement |
|--|---|
|  Blue / >>>I |  >>>I / Preset+ |
|  Text |  Text / Goto |
|  Size |  Shift + Zoom / |
|  Reveal |  Shift + Smart / List |
|  Cancel |  Shift + Exit / Cancel / Clear |
|  Hold / Sleep |  Sleep / Timer |
|  Hold / Sleep |  Shift + Stop / |
|  Index |  Shift + Display / Media |
|  Sub.Code |  Eject / Surround |
|  Mix |  Shift + Text / |

