



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Repeat		Text		10+		Guide
	A-B		Shift + Text		Time		AV
	Open / Close		Eject		Setup		Options
	N / P		TV/R		Title		Media
	Subtitle		Subt		Up		Up
	Angle		Format		Right		Right
	Language		Dual		Down		Down
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		PBC		Smart
	4		4		Menu		Menu
	5		5		Vol -		Vol -
	6		6		Vol +		Vol +
	7		7		Zoom		Shift + Eject
	8		8		Return		Back
	9		9		L / R		Shift + Dual





Original	Replacement
Step	Shift + Pause
Slow	Shift + Play
Clear	Exit
Program	Sleep
Mute	Mute
Display	Info
Prev <<	<<
Next >>	>>
Rev <<	<<
Fwd >>	>>
Stop	Stop
Play / Pause	Play
Play / Pause	Pause
V-Mode	3D

Original	Replacement

