



| Original  |              | Replacement   |              | Original  |        | Replacement   |               |
|---|--------------|---|--------------|---|--------|---|---------------|
|    | Power        |    | Power        |    | 0      |    | 0             |
|    | Repeat       |    | Text         |    | 10+    |    | Guide         |
|    | A-B          |    | Shift + Text |    | Time   |    | AV            |
|    | Open / Close |    | Eject        |    | Setup  |    | Options       |
|    | N / P        |    | TV/R         |    | Title  |    | Media         |
|    | Subtitle     |    | Subt         |    | Up     |    | Up            |
|    | Angle        |    | Format       |    | Right  |    | Right         |
|    | Language     |    | Dual         |    | Down   |    | Down          |
|    | 1            |    | 1            |    | Left   |    | Left          |
|    | 2            |    | 2            |    | Enter  |    | Ok            |
|   | 3            |   | 3            |   | PBC    |   | Smart         |
|  | 4            |  | 4            |  | Menu   |  | Menu          |
|  | 5            |  | 5            |  | Vol -  |  | Vol -         |
|  | 6            |  | 6            |  | Vol +  |  | Vol +         |
|  | 7            |  | 7            |  | Zoom   |  | Shift + Eject |
|  | 8            |  | 8            |  | Return |  | Back          |
|  | 9            |  | 9            |  | L / R  |  | Shift + Dual  |





| Original     | Replacement        | Original | Replacement |
|--------------|--------------------|----------|-------------|
| Step         | +  Shift + Pause   |          |             |
| Slow         | +  Shift + Play    |          |             |
| Clear        | CLEAR  EXIT Exit   |          |             |
| Program      | PROG  SLEEP Sleep  |          |             |
| Mute         | MUTE Mute          |          |             |
| Display      | DISPLAY  INFO Info |          |             |
| Prev I<<     | I<<                |          |             |
| Next >>I     | >>I                |          |             |
| Rev <<       | <<                 |          |             |
| Fwd >>       | >>                 |          |             |
| Stop         | Stop               |          |             |
| Play / Pause | PLAY MODE Play     |          |             |
| Play / Pause | Pause              |          |             |
| V-Mode       | ECO  3D 3D         |          |             |
|              |                    |          |             |
|              |                    |          |             |
|              |                    |          |             |
|              |                    |          |             |

