








 

 





 

 


















Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 CH List	 List
 P+	 Ch +
 P-	 Ch -
 Media.P	 Media
 Menu	 Menu
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	PIP		3D				
	AD/Subt.		Subt				
	Sports		TV/R				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				

