
















 







 

 



 




Original	Replacement	Original	Replacement
	Power		Red / Menu
	Power		Red
	Shift + Menu		Red / Menu
	Shift + Menu		Red / Menu
	Source		Green / Menu
	Source		Green
	I - II		Green / Menu
	I - II		Green / Menu
	Subtitles		Yellow / Other
	Subtitles		Yellow / Other
	[i+]		Yellow / Other
	[i+]		Yellow / Other
	[?]		Blue / OK
	[?]		Blue / OK
	Mix		Blue / OK
	Mix		Blue / OK
	Zoom		Special Audio
	Zoom		Special Audio
	Time		Text
	Time		Text
	[PP]		P -
	[PP]		P -
	DNR		P +
	DNR		P +
	Mosaic		Vol -
	Mosaic		Vol -
	Up		Vol +
	Up		Vol +
	Down		1
	Down		1
	Right		2
	Right		2
	Left		3
	Left		3





Original	Replacement	Original	Replacement
	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>

Original	Replacement	Original	Replacement
	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P +		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

