 


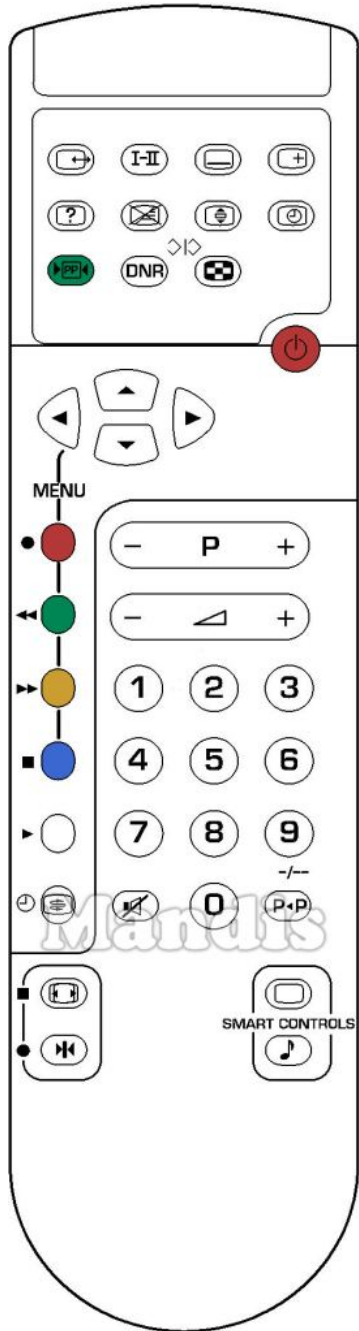

Original	Replacement	Original	Replacement
 Power	 Power	 Red / Menu	 Red
 ><>	 Shift + Menu	 Red / Menu	 Shift + Format
 Source	 AV	 Green / Menu	 Green
 I - II	 Dual	 Green / Menu	 Shift + Dual
 Subtitles	 Subt	 Yellow / Other	 Yellow
 [ i+ ]	 Info	 Yellow / Other	 Menu
 [ ? ]	 D. Menu	 Blue / OK	 Blue
 Mix	 TV/R	 Blue / OK	 Ok
 Zoom	 Eject	 Special Audio	 Shift + Subt
 Time	 Shift + AV	 Text	 Text
 [ PP ]	 Back	 P -	 Ch -
 DNR	 Options	 P +	 Ch +
 Mosaic	 Guide	 Vol -	 Vol -
 Up	 Up	 Vol +	 Vol +
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3






 







 



 



 



 

 








	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original	Replacement
 Power	 Power
 Time	 TV/R
 Zoom	 3D
 Mix	 Text
 [?]	 Shift + Info
 [i+]	 Info
 Freeze/Rec	 Pause
 Format/Stop	 Format
 Source	 AV
 I-II	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Rec	 Rec
 <<	 <<
 >>	 >>

Original	Replacement
 Stop	 Stop
 Play	 Play
 Timer	 Shift + AV
 P-	 Ch -
 P+	 Ch +
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

