



Original	Replacement
TEST Test	GOTO TEXT Text / Goto
1 1	TV 1 1
1 1 FM/AM	SHIFT + TV 1 Shift + 1
2 2	DVD 2 2
2 2 FM/AM	SHIFT + DVD 2 Shift + 2
3 3	CD - STB 3 3
3 3 FM/AM	SHIFT + CD - STB 3 Shift + 3
EFFECT Effect	FORMAT PICTURE Picture / Format
4 4	VIDEO 4 4
4 4 FM/AM	SHIFT + VIDEO 4 Shift + 4
5 5	TAPE 5 5
5 5 FM/AM	SHIFT + TAPE 5 Shift + 5
6 6	TUNER 6 6
6 6 FM/AM	SHIFT + TUNER 6 Shift + 6
7/P 7/P	SHIFT + AUX - HDD 7 Shift + 7
7/P 7 FM/AM	AUX - HDD 7 7
8 8	USB 8 8

Original	Replacement
8 8 FM/AM	SHIFT + USB 8 Shift + 8
9 9	BLUETOOTH 9 9
9 9 FM/AM	SHIFT + BLUETOOTH 9 Shift + 9
*LEVEL Level- SURR L	Down Down
*LEVEL Level - SURR R	SHIFT + Down Shift + Down
*LEVEL Level- Center	SHIFT + CH PAGE - Shift + CH- /
*LEVEL Level- SUBWFR	Left Left
*LEVEL Level- Front L	VOL - Vol-
*LEVEL Level- Front R	CH PAGE - CH- / Page-
*LEVEL+ Level+ SURR L	Up Up
*LEVEL+ Level+ SURR R	SHIFT + Up Shift + Up
*LEVEL+ Level+ Center	SHIFT + CH PAGE + Shift + CH+ /
*LEVEL+ Level+ SUBWFR	Right Right
*LEVEL+ Level+ Front L	+ VOL Vol+
*LEVEL+ Level+ Front R	+ CH PAGE CH+ / Page+
10 10/Return	SHIFT + GUIDE EPG Shift + Guide / EPG / -/-
10 10 FM/AM	GUIDE EPG Guide / EPG / -/-





Original	Replacement	Original	Replacement
0	0		
+10	+10/+100		Fav / Marker / PC
+10	+10 FM/AM		Shift + 0
Play/TA/News/Info			Shift + Play /
Play FM/AM			Play / Slow
I<</PTY-			Shift + I<< / Preset-
I<<FM/AM			I<< / Preset-
Pause/PTY Search			Shift + Pause / Step /
Pause FM/AM			Pause / Step / Freeze
>>I/PTY+			Shift + >>I / Preset+
>>I FM/AM			>>I / Preset+
Stop/Display			Shift + Stop /
Stop FM/AM			Stop / Hold
FM/AM			Shift + TV/Radio / Program
FM Mode			TV/Radio /

Original	Replacement	Original	Replacement





Original	Replacement
Audio Standby	Audio / Lang I/II
1	1
2	2
3	3
TV Standby	Power
4	4
5	5
6	6
VCR Standby	Shift + Power
7/P	7
DVD Standby	Shift + 2
Play/TA/News/Info	Play / Slow
Sleep	Sleep / Timer
I<</PTY-	I<< / Preset-
Pause/PTY Search	Pause / Step / Freeze
>>I/PTY+	>>I / Preset+
Stop/Display	Stop / Hold

Original	Replacement
FM/AM	Shift + TV/Radio / Program
VCR	Shift + 4
Analog/Digital	Smart / List
FM/Mode	AV / Input / RDS
Surround	Eject / Surround
DSP	Text / Goto
Surround DSP	Sound / Title
Dimmer	Shift + Mute / Dimmer
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
VCR CH+	Shift + CH+ /
Tv CH+	CH+ / Page+
Tv Vol+	Shift + Vol+
Vol+	Vol+
VCR CH-	Shift + CH- /
Tv CH-	CH- / Page-
Tv Vol-	Shift + Vol-



Mode















 








Original	Replacement
Vol-	Vol-

Original	Replacement





Original	Replacement	Original	Replacement
 1 TV Sound	 1	 2 TV Sound	 2
 3 TV Sound	 3	 4 TV Sound	 4
 5 TV Sound	 5	 6 TV Sound	 6
 7 TV Sound	 7	 8 TV Sound	 8
 9 TV Sound	 9	 10 TV Sound	 Guide / EPG / -/--
 0 TV Sound	 0	 +10 TV Sound	 Fav / Marker / PC
 Play	 Play / Slow	 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze	 >>I	 >>I / Preset+
 Rec Pause	 Rec / Rec Mode		

Original	Replacement	Original	Replacement
 Stop	 Stop / Hold	 TV Sound	 Sound / Title

