 

 
 
 
 
 
 


 
 
 
 
 



 
 


 
 
 
 
 
 


 
 
 

 

 
 

 
 
 





 


 
 
 
 

 

 














Original		Replacement		Original		Replacement	
	Power Receiver		Power		2 Receiver		2
	Enter Receiver		Ok		3 Receiver		3
	Up Receiver		Up		4 Receiver		4
	Down Receiver		Down		5 Receiver		5
	Right Receiver		Right		6 Receiver		6
	Left Receiver		Left		7 Receiver		7
	Return Receiver		Back		8 Receiver		8
	Q/Setup Receiver		Smart		9 Receiver		9
	Home/Audio		Media		0/11 Receiver		0
	Play Receiver		Play		+10/--/--10/Dimmer/D.Tun Receiver		Shift + Guide
	I<< Receiver		I<<		CLR/Sleep/12 Receiver		Pre Ch
	>>I Receiver		>>I		Movie Tv/Red/Search		Red
	<< Receiver		<<		Music/Green/Repeat Receiver		Green
	>> Receiver		>>		Game/Yellow/Random Receiver		Yellow
	Pause Receiver		Pause		Stereo/Blue/Mode Receiver		Blue
	Stop Receiver		Stop		Vol+ Receiver		Vol +
	1 Receiver		1		Vol- Receiver		Vol -





Original	Replacement	Original	Replacement
CH Disc/Album+ Receiver	Ch +	Yellow Tv	Subt
CH Disc/Album- Receiver	Ch -	Blue Tv	TV/R
Power Tv	Shift + Power	1 Tv	Shift + 1
Input Tv	AV	2 Tv	Shift + 2
CH+ Tv	Shift + Ch +	3 Tv	Shift + 3
CH- Tv	Shift + Ch -	4 Tv	Shift + 4
Up Tv	Shift + Up	5 Tv	Shift + 5
Enter Tv	Shift + Ok	6 Tv	Shift + 6
Down Tv	Shift + Down	7 Tv	Shift + 7
Right Tv	Shift + Right	8 Tv	Shift + 8
Left Tv	Shift + Left	9 Tv	Shift + 9
Menu/Prev CH	Menu	0/11 Tv	Shift + 0
Top Menu/Guide	Shift + Menu	+10/--/--10 Tv	Guide
Return Tv	Shift + Back	CLR/Sleep/12	Shift + Pre Ch
Q/Setup Tv	Shift + Smart	Vol+ Tv	Shift + Dual
Red Tv	Options	Vol- Tv	Shift + Options
Green Tv	Dual	AUX	Text





Original		Replacement		Original		Replacement	
	Power BD/DVD		Power		Stop BD/DVD		Stop
	Menu/Prev CH		Menu		Movie Tv/Red/Search		Red
	Top Menu/Guide BD/DVD		Options		Music/Green/Repeat at BD/DVD		Green
	Q/Setup		Smart		Game/Yellow/Random BD/DVD		Yellow
	Return BD/DVD		Back		Stereo/Blue/Mode BD/DVD		Blue
	Home/Audio		Media		1 BD/DVD		1
	Enter BD/DVD		Ok		2 BD/DVD		2
	Up BD/DVD		Up		3 BD/DVD		3
	Down BD/DVD		Down		4 BD/DVD		4
	Right BD/DVD		Right		5 BD/DVD		5
	Left BD/DVD		Left		6 BD/DVD		6
	I<< BD/DVD		I<<		7 BD/DVD		7
	>>I BD/DVD		>>I		8 BD/DVD		8
	<< BD/DVD		<<		9 BD/DVD		9
	>> BD/DVD		>>		0/11 BD/DVD		0
	Play BD/DVD		Play		+10/--/-10/D.Tun/Dimmer BD/DVD		Guide
	Pause BD/DVD		Pause		CLR/Sleep/12		Pre Ch



 





 
 

 
 

 
 
 

 
 
 

 

 
 


 


 




 

 

 

 



 

 

 

 
 


 


 

 
 
 






BD/DVD



Original	Replacement	Original	Replacement
CBL/SAT	Text	<< CBL/SAT	Shift + Ch -
Vol+ Receiver	Vol +	>> CBL/SAT	Shift + Ch +
Vol- Receiver	Vol -	Play CBL/SAT	3D
Power CBL/SAT	Shift + Power	Movie Tv/Red/Search	Dual
CH Disc/Album+ CBL/SAT	Ch +	Music/Green/Repeat at CBL/SAT	Subt
CH Disc/Album- CBL/SAT	Ch -	Game/Yellow/Random CBL/SAT	AV
Menu/Prev CH CBL/SAT	Shift + Menu	Stereo/Blue/Mode CBL/SAT	Format
Top Menu/Guide CBL/SAT	Shift + Options	1 CBL/SAT	Shift + 1
Return CBL/SAT	Shift + Back	2 CBL/SAT	Shift + 2
Q/Setup	Shift + Smart	3 CBL/SAT	Shift + 3
Up CBL/SAT	Shift + Up	4 CBL/SAT	Shift + 4
Enter CBL/SAT	Shift + Ok	5 CBL/SAT	Shift + 5
Down CBL/SAT	Shift + Down	6 CBL/SAT	Shift + 6
Right CBL/SAT	Shift + Right	7 CBL/SAT	Shift + 7
Left CBL/SAT	Shift + Left	8 CBL/SAT	Shift + 8
Pause CBL/SAT	Shift + Pause	9 CBL/SAT	Shift + 9
Stop CBL/SAT	Shift + Stop	0/11 CBL/SAT	Shift + 0










 

 




 



 



 

 

 
 

 
 
 


 

 



 



 
 
 

 
 



 

 



 
 
 

 





Original	Replacement	Original	Replacement
 Power TV/CD	 Power	 Stop TV/CD	 Stop
 CH/Disc+ TV/CD	 Ch +	 Movie Tv/Red/Search	 Red
 CH/Disc TV/CD	 Ch -	 Music/Green/Repeat TV/CD	 Green
 Return TV/CD	 Back	 Game/Yellow/Random TV/CD	 Yellow
 Q/Setup TV/CD	 Smart	 Stereo/Blue/Mode TV/CD	 Blue
 Home/Audio	 Media	 1 TV/CD	 1
 Up TV/CD	 Up	 2 TV/CD	 2
 Down TV/CD	 Down	 3 TV/CD	 3
 Right TV/CD	 Right	 4 TV/CD	 4
 Left TV/CD	 Left	 5 TV/CD	 5
 Enter TV/CD	 Ok	 6 TV/CD	 6
 I<< TV/CD	 I<<	 7 TV/CD	 7
 >>I TV/CD	 >>I	 8 TV/CD	 8
 << TV/CD	 <<	 9 TV/CD	 9
 >> TV/CD	 >>	 0/11 TV/CD	 0
 Play TV/CD	 Play	 +10/-10/D.Tun/Dimmer TV/CD	 Guide
 Pause TV/CD	 Pause	 CLR/Sleep/12	 Pre Ch



TV/CD



Original		Replacement		Original		Replacement	
	Power Receiver Zone 2		Power		<< Zone 2		<<
	Vol+ Zone 2		Vol +		Pause Zone 2		Pause
	Vol- Zone 2		Vol -		Stop Zone 2		Stop
	CH Disc/Album+ Zone 2		Ch +		Movie Tv/Red/Search		Red
	CH Disc/Album- Zone 2		Ch -		Music/Green/Repeat at Zone 2		Green
	Up Zone 2		Up		Game/Yellow/Random Zone 2		Yellow
	Enter Zone 2		Ok		Stereo/Blue/Mode Zone 2		Blue
	Down Zone 2		Down		1 Zone 2		1
	Right Zone 2		Right		2 Zone 2		2
	Left Zone 2		Left		3 Zone 2		3
	Return Zone 2		Back		4 Zone 2		4
	Q/Setup Zone 2		Smart		5 Zone 2		5
	Home/Audio Zone		Media		6 Zone 2		6
	I<< Zone 2		I<<		7 Zone 2		7
	>>I Zone 2		>>I		8 Zone 2		8
	Play Zone 2		Play		9 Zone 2		9
	>> Zone 2		>>		0/11 Zone 2		0



