

 

 
 

 
 
 
 
 

 
 
 

 


 





 






 
 
 




 
 


 


 
 
 



 



 














Original	Replacement	Original	Replacement
 Power	 Power	 Dimmer	 Media
 TV	 1	 Back	 Back
 HDMI	 2	 Options	 Options
 Bluetooth	 3	 Home	 Smart
 Analog	 4	 Up	 Up
 USB	 5	 Down	 Down
 Auto Sound	 6	 Right	 Right
 Cinema	 7	 Left	 Left
 Music	 8	 OK	 Ok
 Game	 9	 Audio	 Dual
 News	 Guide	 Vol+	 Vol +
 Sports	 0	 Vol-	 Vol -
 Standard	 Pre Ch	 Mute	 Mute
 Voice	 3D	 SW Vol+	 Ch +
 Vertical S.	 Subt	 SW Vol-	 Ch -
 Night	 Exit	 I<<	 I<<
 Display	 Info	 Play	 Play





Original	Replacement	Original	Replacement
 Pause	 Pause		
 >>I	 >>I		

