



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Display		Info
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	Sleep		Sleep
	EPG		Guide
	FAV		Pre Ch
	FAV-	 + 	Shift + Ch -
	FAV+	 + 	Shift + Ch +
	Aspect		3D
	Input		AV
	Nicam		Smart
	LCD Menu		Menu
	Exit		Exit
	Eject		Eject
	DVD Setup		D. Menu
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right





Original	Replacement	Original	Replacement
	Left		Play
	OK		Pause
	Vol+		Stop
	Vol-		Media
	D.Menu/Text		Tv/Radio
	D.Disp/Hold		Red/Prog
	Zoom/Lang		Green/Intro
	Subtitle		Yellow/Repeat
	Goto/Index		Blue/A-B
	Audio/Size		
	Title/Subpage		
	Angle/Reveal		
	<<		
	>>		
	l<<		
	>>l		
	Rec		
	Left		Play
	Ok		Pause
	Vol +		Stop
	Vol -		Media
	Text		TV/R
	List		Red
	Dual		Green
	Subt		Yellow
	Shift + List		Blue
	Format		
	Shift + Subt		
	Options		
	<<		
	>>		
	l<<		
	>>l		
	Rec		

