



Original	Replacement	Original	Replacement
 Standby	 Power	 Up	 Up
 1/VCR/DVR	 1	 Previous Menu/Muting	 Menu / Home
 2/CBL/SAT	 2	 Left/Playlist/Cat	 Left
 3/Game/TV	 3	 Enter	 OK
 4/AUX	 4	 Right/Playlist/Cat	 Right
 5/Multi CH	 5	 Setup	 Setup / OPT /
 6/DVD	 6	 Down	 Down
 7/Tape	 7	 Return	 Back / Return
 8/Tuner	 8	 Pause /<	 Pause / Step / Freeze
 9/CD	 9	 Play	 Play / Slow
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Stop	 Stop / Hold
 0/11/Dimmer	 0	 << / Tune-	 << / Tune-
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 >> / Tune+	 >> / Tune+
 CH Disc	 CH+ / Page+	 Stereo	 Sound / Title
 CH Disc Album-	 CH- / Page-	 Surround	 Eject / Surround
 Vol+	 Vol+	 < Listening Mode	 Shift + Left
 Vol-	 Vol-	 Listening Mode >	 Shift + Right

Original	Replacement	Original	Replacement
 Standby	 Power	 Up	 Up
 1/VCR/DVR	 1	 Left/Playlist/Cat	 Left
 2/CBL/SAT	 2	 Enter	 OK
 3/Game/TV	 3	 Right/Playlist/Cat	 Right
 4/AUX	 4	 Setup	 Setup / OPT /
 5/Multi CH	 5	 Down	 Down
 6/DVD	 6	 Return	 Back / Return
 7/Tape	 7	 Pause /<	 Pause / Step / Freeze
 8/Tuner	 8	 Play	 Play / Slow
+10/10/-/-/D.Tun	Guide / EPG / -/-	Stop	Stop / Hold
0/11/Dimmer	0	<< / Tune-	<< / Tune-
CLR/12/Sleep/Ent	Fav / Marker / PC	>> / Tune+	>> / Tune+
CH Disc	CH+ / Page+	Stereo	Sound / Title
CH Disc Album-	CH- / Page-	Surround	Eject / Surround
Vol+	Vol+	< Listening Mode	Shift + Left
Vol-	Vol-	Listening Mode >	Shift + Right





Original	Replacement
Test Tone/Audio	Audio / Lang I/II
CH Sel/Subtitle	Subtitle / EQ
Random Level-	Blue / Prime Video / Random
Repeat Level+	Green / APP / Repeat
Display	Display / Media
L.Night/DVD	Sleep / Timer
Cine FLTR/HDD	TV/Radio /

Original	Replacement





Original	Replacement	Original	Replacement
Standby	Power	Enter	OK
1/VCR/DVR	1	Right/Playlist/Cat	Right
2/CBL/SAT	2	Setup	Setup / OPT /
3/Game/TV	3	Down	Down
4/AUX	4	Return	Back / Return
5/Multi CH	5	Pause / <	Pause / Step / Freeze
6/DVD	6	Play	Play / Slow
7/Tape	7	Stop	Stop / Hold
8/Tuner	8	<<	<< / Tune-
9/CD	9	>>	>> / Tune+
+10/10/-/-/D.Tun	Guide / EPG / -/-	<<	<< / Preset-
0/11/Dimmer	0	>>	>> / Preset+
CLR/12/Sleep/Ent	Fav / Marker / PC	Stereo	Sound / Title
Guide/Top	D.Menu / Top	Surround	Eject / Surround
Up	Up	< Listening Mode	CH- / Page-
Previous Menu/Muting	Menu / Home	Listening Mode >	CH+ / Page+
Left/Playlist/Cat	Left	Test Tone/Audio	Audio / Lang I/II

Original	Replacement	Original	Replacement
Enter	OK	Enter	OK
Right/Playlist/Cat	Right	Enter	OK
Setup	Setup / OPT /	Enter	OK
Down	Down	Enter	OK
Return	Back / Return	Enter	OK
Pause / <	Pause / Step / Freeze	Enter	OK
Play	Play / Slow	Enter	OK
Stop	Stop / Hold	Enter	OK
<<	<< / Tune-	Enter	OK
>>	>> / Tune+	Enter	OK
<<	<< / Preset-	Enter	OK
>>	>> / Preset+	Enter	OK
Stereo	Sound / Title	Enter	OK
Surround	Eject / Surround	Enter	OK
< Listening Mode	CH- / Page-	Enter	OK
Listening Mode >	CH+ / Page+	Enter	OK
Test Tone/Audio	Audio / Lang I/II	Enter	OK



 



Original	Replacement
CH Sel/Subtitle	Smart / List
Level-/Random	Blue / Prime Video / Random
Level+/Repeat	Green / APP / Repeat
Display	Display / Media
Play Mode VCR	AV / Input / RDS
L.Night/DVD	Sleep / Timer
Cine FLTR/HDD	TV/Radio /

Original	Replacement



 

 



 



 

 

 

 



 

 





 

 

 







 









Original	Replacement	Original	Replacement
 Standby	 Power	 Pause / <	 Pause / Step / Freeze
 1/VCR/DVR	 1	 Play	 Play / Slow
 2/CBL/SAT	 2	 Stop	 Stop / Hold
 3/Game/TV	 3	 <<	 << / Tune-
 4/AUX	 4	 >>	 >> / Tune+
 5/Multi CH	 5	 I<<	 I<< / Preset-
 6/DVD	 6	 >>I	 >>I / Preset+
 7/Tape	 7	 Stereo	 Audio / Lang I/II
 8/Tuner	 8	 Surround	 Eject / Surround
 9/CD	 9	 < Listening Mode	 Left
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Listening Mode >	 Right
 0/11/Dimmer	 0	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Disc/Album CH-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		





Original	Replacement	Original	Replacement
 Standby	 Power	 <<	 << / Tune-
 1/VCR/DVR	 1	 Stereo	 Audio / Lang I/II
 2/CBL/SAT	 2	 Surround	 Eject / Surround
 3/Game/TV	 3	 < Listening Mode	 Left
 4/AUX	 4	 Listening Mode >	 Right
 5/Multi CH	 5	 Play Mode/VCR	 OK
 6/DVD	 6	 L.Night/DVD	 Sleep / Timer
 7/Tape	 7		
 8/Tuner	 8		
 9/CD	 9		
 +10/10/-/-/D.Tun	 Guide / EPG / -/-		
 0/11/Dimmer	 0		
 Disc/Album	 CH+ / Page+		
 Disc/Album CH-	 CH- / Page-		
 Pause/<	 Pause / Step / Freeze		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

