
 
 

 








 
 




 

 



 










Original	Replacement
 Power	 Power
 Eject	 Eject
 Tv/Radio	 TV/R
 Red/Goto	 Red
 Green/Angle	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue
 FAV	 Pre Ch
 Text	 Text
 Freeze/Hold	 List
 Guide	 Shift + Guide
 D.Menu	 D. Menu
 Subtitle	 Subt
 Zoom/Size	 Format
 Aspect	 3D
 Subpage	 Smart
 Media	 Media

Original	Replacement
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 D.Setup	 Options
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I/Index	 >>I
 Menu	 Menu
 Lang/Audio	 Dual
 Sleep	 Sleep
 Title/Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Replacement	
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original		Replacement	
	-/--		Guide
	Back		Back
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual

