





































| Original   | Replacement   |
|--|---|
|  Power    |  Power             |
|  Energy   |  Display / Media   |
|  Picture  |  Picture / Format  |
|  Sound    |  Sound / Title     |
|  Mute     |  Mute / Dimmer     |
|  Audio    |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ     |
|  16:9/4:3 |  Shift + Zoom /    |
|  Sleep    |  Sleep / Timer     |
|  1        |  1                 |
|  2       |  2                |
|  3      |  3               |
|  4      |  4               |
|  5      |  5               |
|  6      |  6               |
|  7      |  7               |
|  8      |  8               |

| Original   | Replacement  |
|--|--|
|  9          |  9                      |
|  TTX        |  Text / Goto            |
|  0          |  0                      |
|  Recall     |  Back / Return          |
|  Menu       |  Menu / Home            |
|  Up         |  Up                     |
|  Input      |  AV / Input / RDS       |
|  Left       |  Left                   |
|  OK         |  OK                     |
|  Right      |  Right                  |
|  Exit      |  Exit / Cancel / Clear |
|  Down     |  Down                 |
|  Info     |  Info / Angle         |
|  Vol+     |  Vol+                 |
|  Home     |  Shift + Menu /       |
|  EPG/Hold |  Guide / EPG / -/-    |
|  CH+      |  CH+ / Page+          |



