 



 

 

 

 

 
 
 

 

 





 

 

 

 



 

 

 

 

 

 

 

 



 



 


 




 







Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 TV	 TV/Radio /
 → / ←	 Shift + Smart / List
 [++]	 Display / Media
 [▼]	 Shift + CH- /
 Subtitle	 Subtitle / EQ
 O / I	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 AD	 Shift + AV / Input / RDS
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 [i+]	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Quick	 Shift + Exit / Cancel / Clear
 Search	 Shift + Red / Netflix /
 Home	 Menu / Home
 [o]	 Shift + Display / Media
 Options	 Setup / OPT /
 ▲	 Shift + Up
 GUIDE	 Guide / EPG / -/-



