








 


 


 

 
 


 










Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 EPG	 Guide / EPG / -/--	 Zoom	 Zoom / Size
 Teletext	 Text / Goto	 0	 0
 Select	 Smart / List	 Goto	 Shift + Text /
 Confirm	 D.Menu / Top	 i/Display	 Display / Media
 Title	 Sound / Title	 Guide	 Shift + Guide / EPG / -/--
 Eject	 Eject / Surround	 Up	 Up
 Menu	 Menu / Home	 Left	 Left
 Option	 Shift + Setup / OPT / Tools	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Rec	 Rec / Rec Mode
 3	 3	 Down	 Down
 4	 4	 Return	 Back / Return
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 <<	 << / Tune-
 8	 8	 Stop	 Stop / Hold





Original	Replacement
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 I>/Slow	 Info / Angle
 Pausue/Step	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Source	 AV / Input / RDS
 Time Shift	 Picture / Format
 Repeat	 Shift + Green / APP /
 aA/Subtitle	 Subtitle / EQ
 Setup	 Setup / OPT /
 Red	 Red / Netflix / Search
 Tv System	 TV/Radio /
 Green	 Green / APP / Repeat
 Audio	 Audio / Lang I/II
 Yellow	 Yellow / YouTube / Repeat
 Mute	 Mute / Dimmer

Original	Replacement
 Blue	 Blue / Prime Video / Random

