








 









 

 

















 









 

 





 





 

 






Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/M		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	TV		TV/R
	Video		AV
	L/?		Guide
	L/?		Dual
	PC		Pre Ch
	Text		Text
	F[+]		3D
	Hold/Freeze		Format
	M/S		Options





	Original	Replacement	Original	Replacement
	Mute	MUTE		Mute
	PIP	APP MEDIA		Media
	Auto/Page	HOME SMART		Smart
	i	DISPLAY INFO		Info
	Timer/Mix	AD SUBT		Subt
	F1	SHIFT + 1		Shift + 1
	F2	SHIFT + 2		Shift + 2
	F3	SHIFT + 3		Shift + 3
	F4	SHIFT + 4		Shift + 4

