 


 


 
 

 
 
 
 
 
 

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Yellow/Zoom	 Yellow
 Setup	 Options	 Blue/Bookmark	 Blue
 Open/Close	 Eject	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Display	 Info
 6	 6	 Top Menu	 Menu
 7	 7	 Return	 Back
 8	 8	 Pop Menu/Menu	 D. Menu
 9	 9	 Play	 Play
 0	 0	 Pause	 Pause
 I>/II>	 Ch +	 Stop	 Stop
 <I/<<I	 Ch -	 I<<	 I<<
 Red/Program	 Red	 >>I	 >>I
 Green/Digest	 Green	 <</<<I	 <<





Original		Replacement		Original		Replacement	
	>>/ >>		>>				
	Audio		Dual				
	MC		Format				
	Subtitle		Subt				
	2nd Audio		AV				
	Angle		Sleep				
	Repeat		Text				
	Search		TV/R				
	A-B		List				
	Clear		Exit				
	HDMI		Smart				
	OSC		Media				
	PIP		3D				

