






 









 




 



 






 

 

 

 



 

 


 




 




 
 



 








Original	Replacement	Original	Replacement
 Standby	 Power	 Menu	 Menu
 Mute	 Mute	 Exit	 Exit
 ATV	 Smart	 Up	 Up
 Tv/Radio	 TV/R	 Down	 Down
 Tv Guide	 Guide	 Right	 Right
 USB	 Media	 Left	 Left
 Rec	 Rec	 OK	 Ok
 I<<	 I<<	 1	 1
 >>I	 >>I	 2	 2
 Stop	 Stop	 3	 3
 <<	 <<	 4	 4
 >>	 >>	 5	 5
 Play	 Play	 6	 6
 Pause	 Pause	 7	 7
 Rec List	 List	 8	 8
 AV/Source	 AV	 9	 9
 i/Info	 Info	 0	 0





Original		Replacement	
	Back		Back
	FAV		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Subtitle		Subt
	Aspect		3D
	Audio		Dual
	Sleep		Sleep
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Index		Options
	Reveal		D. Menu

Original		Replacement	
	Power/Display		Shift + Power
	P.Mode		Shift + Format
	Size		Format
	Hold/Lang		Shift + Dual
	S.Mode		Eject

