 


 



 



 
 

 
 






Original	Replacement
	 Power
	 Info / Angle
	 Audio / Lang I/II
	 Mute / Dimmer
	 Subtitle / EQ
	 Fav / Marker / PC
	 Shift + Up
	 Text / Goto
	 Guide / EPG / -/--
	 Shift + Down
	 Menu / Home
	 CH+ / Page+
	 Up
	 Exit / Cancel / Clear
	 Left
	 Vol-
	 OK

Original	Replacement
	 Right
	 Vol+
	 Smart / List
	 CH- / Page-
	 Down
	 Back / Return
	 1
	 2
	 3
	 Picture / Format
	 4
	 5
	 6
	 TV/Radio /
	 7
	 8
	 9





Original	Replacement	Original	Replacement
 0	0	 0	0
 I<<	I<<	 I<< / Preset-	I<< / Preset-
 <<	<<	 << / Tune-	<< / Tune-
 >>	>>	 >> / Tune+	>> / Tune+
 >>I	>>I	 >>I / Preset+	>>I / Preset+
 Play	Play	 Play / Slow	Play / Slow
 Pause	Pause	 Pause / Step / Freeze	Pause / Step / Freeze
 Stop	Stop	 Stop / Hold	Stop / Hold
 Rec	Rec	 Rec / Rec Mode	Rec / Rec Mode
 Red/Timer	Red/Timer	 Sleep / Timer	Sleep / Timer
 Red/Timer	Red/Timer	 Red / Netflix / Search	Red / Netflix / Search
 Eject	Eject	 Eject / Surround	Eject / Surround
 Green	Green	 Green / APP / Repeat	Green / APP / Repeat
 Yellow	Yellow	 Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
 Blue	Blue	 Blue / Prime Video / Random	Blue / Prime Video / Random

Original	Replacement	Original	Replacement

