











Original	Replacement
Power	Power
Eject/Open-Close	Eject
DVD	Blue
VCR	Yellow
AV/Input	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
I.Skip	Guide
Dubbing	Media

Original	Replacement
<</Backward	<<
>>/Forward	>>
I<< Skip	I<<
Skip >>I	>>I
Pause/Step	Pause
Play	Play
Stop	Stop
Disc Menu/List	Menu
Home	Smart
Display	Info
Return	Back
PR/CH(TRK)+	Ch +
PR/CH(TRK)-	Ch -
Up	Up
Down	Down
Right	Right
Left	Left





Original	Replacement
 Enter	 Ok
 O))/Audio	 Dual
 [...] /Subtitle	 Subt
 Zoom	 Shift + Eject
 CHP.ADD	 Text
 Rec	 Rec
 Rec Mode	 Shift + Rec
 Title	 3D
 Thumbnail	 Green
 Play Mode	 Shift + Play
 Marker	 Options
 Search	 Shift + TV/R
 Clear	 Exit
 Tv/VCR	 TV/R
 *	 Mute
 Power Tv	 Shift + Power
 AV/ Input Tv	 Shift + AV

Original	Replacement
 PR/CH- Tv	 Shift + Ch -
 PR/CH+ Tv	 Shift + Ch +
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -

