


 





 



 

 


 










Original	Replacement	Original	Replacement
 Standby	 Power	 Info	 Info / Angle
 DTV/VCR	 Display / Media	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 CH+	 CH+ / Page+
 3	 3	 CH-	 CH- / Page-
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Vol+	 Vol+
 0	 0	 Vol-	 Vol-
 FAV	 Fav / Marker / PC	 Text	 Text / Goto
 Audio	 Audio / Lang / I/II	 Red	 Red / Netflix / Search
 Recall	 Back / Return	 Green	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ	 Yellow	 Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
 Blue	 Blue / Prime Video / Random		
 Tv/Radio	 TV/Radio /		
 Rec List	 Smart / List		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Play	 Play / Slow		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Record	 Rec / Rec Mode		

