



Original		Replacement		Original		Replacement	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
	Blue Blue / Prime Video / Random		>>I >>I / Preset+
	TTX Text / Goto		FAV Fav / Marker / PC
	Index D.Menu / Top		
	Hold Shift + Stop /		
	I/II/Audio Audio / Lang I/II		
	Repeat/Rec Rec / Rec Mode		
	Repeat/Rec Shift + Green / APP /		
	Stop/Reveal Stop / Hold		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	Size Zoom / Size		
	Subtitle Subtitle / EQ		
	<</Subpage << / Tune-		
	>> >> / Tune+		
	Tv/Radio TV/Radio /		
	I<< I<< / Preset-		
	EPG Guide / EPG / -/--		

