 


 


 
 



 
 










 




 




 

 



 





 



 

















 




Original	Replacement	Original	Replacement
 Power Audio	 Power	 9	 9
 Power Tv	 Shift + Power	 0	 0
 Bluetooth Setting	 Smart	 10	 Guide
 Rec Mode	 Rec	 >10	 Pre Ch
 Title Search	 Shift + TV/R	 Sleep	 Sleep
 Tv/Video	 TV/R	 A.STBY	 Media
 Eco Dimmer	 3D	 Tv Channel +	 Ch +
 Display/Chara	 Info	 Clock/Timer	 AV
 Title Edit	 D. Menu	 Tv Channel -	 Ch -
 1/Marc	 1	 Tv Vol+	 Shift + Vol +
 2	 2	 Tv Vol-	 Shift + Vol -
 3	 3	 Return	 Back
 4	 4	 Top Menu/PG	 Shift + Menu
 5	 5	 Menu/PL	 Menu
 6	 6	 Audio Vol+	 Vol +
 7	 7	 Audio Vol-	 Vol -
 8	 8	 Cancel	 Exit





Original	Replacement	Original	Replacement
Fade Muting	Mute	Tuner/Play	Shift + Play
On Screen	Shift + Info	Play/Pause	Red
Up	Up	Play/Pause	Green
Down	Down	Play/Pause	Yellow
Right	Right	Play/Pause Bluetooth	Blue
Left	Left	Audio/MPX	Dual
Enter/Set	Ok	Subtitle	Subt
Stop	Stop	Zoom	Eject
Play	Play	FM/AM/Audio In	Format
Pause	Pause	File Type	Shift + Subt
I<<	I<<	Angle	List
>>I	>>I	Set Up	Options
I<< Group/Title Skip	Shift + I<<	VFP/Scan Mode	Shift + 1
>>I Group/Title Skip	Shift + >>I	3D Phonic/HP Surr	Shift + 2
<<	<<	C.Voice	Shift + Mute
>>	>>	DVD/Audio In	Shift + 3
>> Group/Title	Shift + >>	Sound Mode	Shift + Dual





	Original	Replacement		Original	Replacement
	Repeat	Text			
	My Sound	Shift + Media			
	V.Bass	Shift + 4			
	Repeat A-B	Shift + Text			

