 


 



 
 



 
 





 





 




 




 

 











 



 


















 
 
 
 
 





Original	Replacement	Original	Replacement
 Power Audio	 Power	 9	 9
 Power Tv	 +  Shift + Power	 0	 0
 Bluetooth Setting	 Smart	 10	 Guide
 Rec Mode	 Rec	 >10	 Pre Ch
 Title Search	 +  Shift + TV/R	 10	 Sleep
 Tv/Video	 TV/R	 0	 Media
 Eco Dimmer	 3D	 Tv Channel +	 Ch +
 Display/Chara	 Info	 >10	 AV
 Title Edit	 D. Menu	 Tv Channel -	 Ch -
 1/Marc	 1	 Tv Vol+	 +  Shift + Vol +
 2	 2	 Tv Vol-	 +  Shift + Vol -
 3	 3	 Return	 Back
 4	 4	 Top Menu/PG	 +  Shift + Menu
 5	 5	 Menu/PL	 Menu
 6	 6	 Audio Vol+	 Vol +
 7	 7	 Audio Vol-	 Vol -
 8	 8	 Cancel	 Exit





Original	Replacement	Original	Replacement
 Fade Muting	 Mute	 Tuner/Play	 Shift + Play
 On Screen	 Shift + Info	 Play/Pause	 Red
 Up	 Up	 Play/Pause	 Green
 Down	 Down	 Play/Pause	 Yellow
 Right	 Right	 Play/Pause Bluetooth	 Blue
 Left	 Left	 Audio/MPX	 Dual
 Enter/Set	 Ok	 Subtitle	 Subt
 Stop	 Stop	 Zoom	 Eject
 Play	 Play	 FM/AM/Audio In	 Format
 Pause	 Pause	 File Type	 Shift + Subt
 I<<	 I<<	 Angle	 List
 >>I	 >>I	 Set Up	 Options
 I<< Group/Title Skip	 Shift + I<<	 VFP/Scan Mode	 Shift + 1
 >>I Group/Title Skip	 Shift + >>I	 3D Phonic/HP Surr	 Shift + 2
 <<	 <<	 C.Voice	 Shift + Mute
 >>	 >>	 DVD/Audio In	 Shift + 3
 >> Group/Title Skip	 Shift + >>	 Sound Mode	 Shift + Dual





Original		Replacement		Original		Replacement	
	Repeat		Text				
	My Sound	+	Shift + Media				
	V.Bass	+	Shift + 4				
	Repeat A-B	+	Shift + Text				

