
 





Original	Replacement	Original	Replacement
 Power	 Power	 Repeat	 Green / APP / Repeat
 Sleep	 Sleep / Timer	 Auto/Mono	 Audio / Lang I/II
 Play/Rec	 Rec / Rec Mode	 CD	 Shift + 3
 Clock/Timer	 Shift + Sleep / Timer	 Tape	 Shift + 5
 1	 1	 EXT	 AV / Input / RDS
 2	 2	 Tuner	 Shift + 6
 3	 3	 Stop	 Stop / Hold
 4	 4	 </II	 Picture / Format
 5	 5	 Play	 Play / Slow
 6	 6	 Muting	 Mute / Dimmer
 >10	 Guide / EPG / -/-	 I<</<<	 << / Tune-
 7	 7	 >>/>>I	 >> / Tune+
 8	 8	 Vol-	 Vol-
 9	 9	 Vol+	 Vol+
 0	 0		
 Cancel	 Exit / Cancel / Clear		
 Play Mode	 Shift + Slow Slow		

