



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Anyview Cast	 Shift + Up
 Anyview Cast Off	 Shift + Down
 TV	 TV/Radio /
 Source	 AV / Input / RDS
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 DMP	 Display / Media
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 HiSmart	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 CH.List	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/-
 CH-	 CH- / Page-





Original	Replacement
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
INFO	ANGLE INFO Info / Angle
0	HDMI - BAT 0
PRE-CH	RETURN BACK Back / Return
I/II LANG.	LANG I/II AUDIO Audio / Lang I/II
P.MODE	FORMAT PICTURE Picture / Format
S.MODE	TITLE SOUND Sound / Title
SIZE	SIZE ZOOM Zoom / Size
SUBT.	EQ SUBTITLE Subtitle / EQ

Original	Replacement
TEXT	GOTO TEXT Text / Goto
INDEX	TOP MENU D.MENU D.Menu / Top
SUB PAGE	OPT-TOOLS SETUP Setup / OPT /

