


 





 

 
 
 

 
 


 
 
 

 

 
 
 

 








Original	Replacement
 Power	 Power
 Mute	 Mute
 Eject / Nicam	 Eject
 Recall / Goto	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV Menu	 Menu
 Source	 AV
 Up	 Up

Original	Replacement
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 DVD/DVB Menu	 D. Menu
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Sound	 Shift + Dual
 PIC	 Shift + Format
 CH +	 Ch +
 CH -	 Ch -
 Sleep	 Sleep
 Aspect	 Format
 Rad / DVD	 Options
 Recall / TV	 Back
 Text	 Text





Original	Replacement	Original	Replacement
 Play/Pause / Info	 Info	 Subtitle	 Subt
 Play/Pause / Info	 Play		
 Play/Pause / Info	 Pause		
 Stop / FAV	 Shift + Pre Ch		
 Stop / FAV	 Stop		
 EPG	 Guide		
 Red / DVD/USB	 Red		
 Green / Title	 Green		
 Yellow / PBC	 Yellow		
 Blue / Angle	 Blue		
 << / Reveal	 <<		
 >> / Hold	 >>		
 I<< / List	 I<<		
 >>I / Index	 >>I		
 Subpage	 Media		
 Display	 Shift + Info		
 Audio	 Dual		

