



Original		Replacement		Original		Replacement	
	Power		Power		Aspect		Format
	Eject/Auto		Eject		Audio		Dual
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Display		Info
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		OK		Ok
	8		8		LCD Menu		Menu
	9		9		DVD Setup/Exit		Exit
	0		0		DVD Setup/Exit		Options
	-/--		Shift + Guide		Input		AV
	Recall		Pre Ch		P.Mode		Shift + Format
	Vol+		Vol +		S.Mode		Shift + Dual
	Vol-		Vol -		Sleep		Sleep





Original		Replacement	
	FAV	+	Shift + Pre Ch
	FAV-	+	Shift + Ch -
	FAV+	+	Shift + Ch +
	EPG		Guide
	Angle/Text		Text
	Zoom/Hold	+	Shift + Eject
	Tv/Radio		TV/R
	Goto/Subpage		3D
	D.Disp/Reveal		List
	Subtitle		Subt
	Title/Size		Smart
	D.Menu/Index		D. Menu
	I>/Media		Media
	Play/Pause		Play
	<<		<<
	Play/Pause		Pause
	>>		>>

Original		Replacement	
	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Red/Prog		Red
	Green/Intro		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue

