 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 

 
 

 





 

 


 

 

 

 



 
 
 

 



 
 

 
 
 
 
 


 
 
 



 
 



Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep





Original	Replacement
 FAV	 Shift + Pre Ch
 FAV-	 Shift + Ch -
 FAV+	 Shift + Ch +
 EPG	 Guide
 Angle/Text	 Text
 Zoom/Hold	 Shift + Eject
 Tv/Radio	 TV/R
 Goto/Subpage	 3D
 D.Disp/Reveal	 List
 Subtitle	 Subt
 Title/Size	 Smart
 D.Menu/Index	 D. Menu
 I>/Media	 Media
 Play/Pause	 Play
 <<	 <<
 Play/Pause	 Pause
 >>	 >>

Original	Replacement
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Red/Prog	 Red
 Green/Intro	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue

