

 
 
 




 
 






Original	Replacement	Original	Replacement
 Power	 Power	 USB	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Goto	 Smart
 4	 4	 Play	 Play
 5	 5	 Pause	 Pause
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Rec	 Rec
 9	 9	 Stop	 Stop
 0	 0	 UP	 Up
 Info	 Info	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 Page+	 >>I	 Left	 Left
 Page-	 I<<	 OK	 Ok
 Audio	 Dual	 CH+	 Ch +

Original	Replacement	Original	Replacement
 Power	 Mute	 SHIFT	
 TV	 DVD	 SAT	 AUX
 Play	 REC MODE	 TV	 DUAL
 <<	 >>	 SOUND	 AD
 DISC NAV	 SETTINGS	 LIST	 SUBT
 PROG	 ECO	 SLEEP	 TV/R
 E-MANUAL	 TIMER	 D.MENU	 TEXT
 TOP MENU	 DISPLAY	 MENU	 INFO
 OK	 BACK	 CLEAR	 EXIT
 VOL+	 HOME SMART	 APP	 MEDIA
 VOL-	 CH+	 1	 2
 1	 3	 4	 5
2	6	3	7
3	8	4	8
4	9	5	9
5	FAV	6	PRE-CH
6	GUIDE	7	0
7	A	8	B
8	C	9	D
9	Mandis SHOP	0	www.mandis.tv
0		PRE-CH	



