 
 
 


 






 




Original	Replacement	Original	Replacement
	Power		Power
	Input		AV
	Menu		Menu
	Text		Text
	Disp		Shift + Info
	VOD		Smart
	APP		Shift + Media
	Media		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Back		Back
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	EPG		Guide
	Info		Info
	Vol +		Vol +
	Vol -		Vol -
	List		List
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Cinema		Dual
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Rec		Rec
	1		1
	2		2





	Original	Replacement		Original	Replacement
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	TV / Radio		TV/R		
	OPT		Options		

