







| Original | Replacement |
|---|---|
|  |  Blue / Prime Video / Random |
|  |  Sleep / Timer |
|  |  Power |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold |
|  |  Yellow / YouTube / Repeat |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  Red / Netflix / Search |
|  |  << / Tune- |
|  |  >> / Tune+ |
|  |  Green / APP / Repeat |
|  |  Display / Media |
|  |  Exit / Cancel / Clear |
|  |  Shift + Play / |
|  |  Shift + Pause / Step / Freeze |

| Original | Replacement |
|---|--|
|  |  Shift + Stop / |
|  |  Smart / List |
|  |  Info / Angle |
|  |  Menu / Home |
|  |  Up |
|  |  Vol+ |
|  |  OK |
|  |  Down |
|  |  Vol- |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

