 
 








 



























Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 Picture / Format
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK
	 Right

Original	Replacement
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/-





Original	Replacement	Original	Replacement
0	0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Play / Pause	Shift + Play /		
C	Shift + Subtitle / EQ		
Retour	Shift + Back / Return		

