










 

 

 


 



 












 


 
 

 



 

 



 

 

 







 






 






 


 




Original		Replacement		Original		Replacement	
	Power		Power		Pause		Pause
	Ambilight		Options		Rec		Rec
	*		Menu		Red		Red
	Colors		Info		Green		Green
	Sources/Pair		AV		Yellow		Yellow
	Up		Up		Blue		Blue
	Down		Down		Vol+		Vol +
	Right		Right		Vol-		Vol -
	Left		Left		Mute		Mute
	OK		Ok		Netflix		Media
	←		Back		Windows		D. Menu
	Home		Smart		CH+		Ch +
	+		Pre Ch		CH-		Ch -
	<<		<<		Rakuten Tv		TV/R
	Play		Play		Exit TV		Exit
	>>		>>		1		1
	Stop		Stop		2		2





Original		Replacement		Original		Replacement	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	TV Guide/List		Guide				

