

 
 
 

 



 










 
 
 





 

 



 



 



 










 

















Original	Replacement	Original	Replacement
 Power	 Power	 Pause / Step	 Pause
 Open / Close	 Eject	 I<< Prev	 I<<
 Input	 AV	 >>I Next	 >>I
 DVD	 Smart	 Stop	 Stop
 VCR	 Media	 << Rew	 <<
 TV / VCR	 TV/R	 Play	 Play
 Setup	 Menu	 >> FFW	 >>
 Disc Menu	 D. Menu	 1	 1
 Up / PR/TRK +	 Up	 2	 2
 Up / PR/TRK +	 Ch +	 3	 3
 Down / PR/TRK -	 Down	 4	 4
 Down / PR/TRK -	 Ch -	 5	 5
 Right	 Right	 6	 6
 Left	 Left	 7	 7
 OK	 Ok	 8	 8
 Display	 Info	 9	 9
 Back	 Back	 0	 0


 



 

 

 



 







Original	Replacement	Original	Replacement
PROGRAM	Program	SLEEP	Sleep
CLEAR	Clear	EXIT	Exit
AUDIO	Audio	DUAL	Dual
SUBTITLE	Subtitle	SUBT	Subt
ANGLE	Angle	FORMAT	Format
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
MARKER	Marker	PRE-CH	Pre Ch
REPEAT	Repeat	TEXT	Text
REPEAT A-B	Repeat A-B	SHIFT + REPEAT TEXT	Shift + Text
SHUFFLE SKIP	Shuffle / Skip	3D	3D
SEARCH	Search	SHIFT + SEARCH TV/R	Shift + TV/R
TITLE SPEED	Title / Speed	LIST	List





Original	Replacement	Original	Replacement
 Power	 Power	 << Rew	 <<
 Open / Close	 Eject	 Play	 Play
 Input	 AV	 >> FFW	 >>
 DVD	 Smart	 1	 1
 VCR	 Media	 2	 2
 TV / VCR	 TV/R	 3	 3
 Setup	 Menu	 4	 4
 Up / PR/TRK +	 Up	 5	 5
 Up / PR/TRK +	 Ch +	 6	 6
 Down / PR/TRK -	 Down	 7	 7
 Down / PR/TRK -	 Ch -	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0
 OK	 Ok	 Clear	 Exit
 Display	 Info	 Marker	 Pre Ch
 Pause / Step	 Pause	 Record	 Rec
 Stop	 Stop	 Search	 Shift + TV/R





Original	Replacement	Original	Replacement
 Showview / Video Plus +	 Options		

