





 



 



 





 





















 




























 

 




Original		Replacement		Original		Replacement	
	Power		Power		Timer		AV
	Open/Close		Eject		Sleep		Sleep
	USB		Blue		DBB		Dual
	CD		Yellow		DSC		Subt
	Tuner		Green		RDS/News		TV/R
	AUX		Red		Mute		Mute
	Vol-		Vol -		Repeat		Text
	Vol+		Vol +		Shuffle		Format
	I<<		I<<				
	>>I		>>I				
	Album/Preset		Ch -				
	Album/Preset		Ch +				
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				
	Program		Shift + Sleep				
	Clock/Display		Info				





	Original	Replacement	Original	Replacement
	USB	 D		
	CD	 C		
	Tuner	 B		
	AUX	 A		
	Open/Close	 ZOOM		
	Power			
	Vol+	 + VOL		
	Vol-	 - VOL		
	Clock/Display	 DISPLAY INFO		
	Timer	 TIMER AV		
	Sleep	 PROG SLEEP		
	DBB	 SOUND DUAL		
	DSC	 AD SUBT		
	RDS/News	 SEARCH TV/R		
	Mute	 MUTE		

