
 








 


























Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	EQ		Subtitle / EQ
	Zoom		Zoom / Size
	TV-Mode		TV/Radio /
	Setup		Setup / OPT /
	L/R		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home
	Up		Up





Original	Replacement
7	7
8	8
9	9
10+	Guide / EPG / -/--
0/10	0
P/N	Fav / Marker / PC
Repeat	Green / APP / Repeat
Sub-	Yellow / YouTube / Repeat
Sub+	Blue / Prime Video / Random
Slow	Shift + Play /
A1	Shift + 1
A2	Shift + 2
B1	Shift + 3
B2	Shift + 4
C1	Shift + 5
C2	Shift + 6
D1	Shift + 7

Original	Replacement
D2	Shift + 8
E1	Shift + 9
E2	Shift + Guide / EPG / -/--
E3	Shift + 0
E4	Shift + Fav / Marker / PC

