
























 

 






Original	Replacement
 Power	 Power
 VCR	 Shift + 2
 DVD	 Shift + 1
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input Select	 AV
 Display / CLK/CNT	 Info
 Open/Close / Eject	 Eject
 TV / VCR	 TV/R

Original	Replacement
 Clear / Count. Reset	 Exit
 Blank Search	 Green
 Top Menu	 Shift + Menu
 Menu	 Menu
 Return	 Back
 Zoom	 Shift + Eject
 Angle	 Format
 Subtitle	 Subt
 Audio	 Dual
 Instant Replay	 Shift + Play
 Play	 Play
 << REW	 <<
 FWD >>	 >>
 Slow	 Shift + Pause
 Stop	 Stop
 Pause Step / Still	 Pause
 I<< Skip	 I<<





Original		Replacement		Original		Replacement	
	Skip >>I		>>I				
	Repeat		Text				
	Marker		Pre Ch				
	i / Set Up / VCR Menu		Options				
	Up / PR/TRK +		Up				
	Up / PR/TRK +		Ch +				
	Down / PR/TRK -		Down				
	Down / PR/TRK -		Ch -				
	Right		Right				
	Left		Left				
	OK / Enter		Ok				
	Auto TRK		Smart				
	A-B RPT / SP/LP		Vol +				
	Random / Inst		Vol -				
	Search		Shift + TV/R				
	Program		Sleep				
	Rec / OTR.		Rec				

