



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tv/Fav/Radio	 Fav / Marker / PC

Original	Replacement
 Tv/Fav/Radio	 TV/Radio /
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P +	 CH+ / Page+
 P -	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Aspect	 Picture / Format
 → [/] ←	 Zoom / Size
 Index / [i+]	 Info / Angle
 Text / Mix	 Text / Goto
 [▼]	 Smart / List
 Dual I/II	 Audio / Lang I/II





Original		Replacement		Original	Replacement
	[≡o]		Sleep / Timer		
	Subtitle		Subtitle / EQ		
	I<< / [≡?]		I<< / Preset-		
	<< / Hold		<< / Tune-		
	>> / Size		>> / Tune+		
	>>I / [≡x]/[O]		>>I / Preset+		
	>>I / [≡x]/[O]		Eject / Surround		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

