





 
 
 










 




 

 
 
 

 








Original	Replacement
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Mute	 Mute
 TXT	 Text
 Aspect	 Format
 Nicam	 Shift + 3D
 Display	 Info
 Sleep	 Sleep
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -





Original		Replacement		Original		Replacement	
	Enter		Ok		A-B / FAV		Pre Ch
	Source		AV		Left / << / Page Down		<<
	Menu		Menu		Setup		Options
	Stop / Hold		Stop		Right / >> / Page Up		Shift + Right
	Play/Pause / Mix		Play		Right / >> / Page Up		>>
	Play/Pause / Mix		Pause		Setup		Shift + Ok
	Subpage		Shift + Subt		Zoom / Still		Shift + Eject
	Goto / Size		Smart		Language		Dual
	Angle / Index		3D		Title		Shift + Info
	Media / Reveal		Media		Down / >>I		Shift + Down
	DVD Menu / DTV/Radio		TV/R		Down / >>I		>>I
	DVD Menu / DTV/Radio		D. Menu		Subtitle		Subt
	Up / I<< / List		Shift + Up				
	Up / I<< / List		List				
	Up / I<< / List		I<<				
	Repeat / EPG		Guide				
	Left / << / Page Down		Shift + Left				

