 


 

 





 

 









 

 





 



 
 
 

 
 
 

 
 
 


 
 

 
 
 


 


 
 
 
 
 
















































Original	Replacement	Original	Replacement
 Power	 Power	 CD 2 Changer	 Info
 Sound Mode	 Dual	 6 Tuner/Video /	 6
 Sleep	 Sleep	 6 cd key	 Shift + 6
 1 Tuner/Video /	 1	 RDS PTY Select	 Format
 1 cd key	 Shift + 1	 7 Tuner/Video /	 7
 Eject CD 3	 Shift + Exit	 7 cd key	 Shift + 7
 2 Tuner/Video /	 2	 8 Tuner/Video /	 8
 2 cd key	 Shift + 2	 8 cd key	 Shift + 8
 CD 3 Changer	 Exit	 Eject CD 1	 Shift + Menu
 3 Tuner/Video /	 3	 9 Tuner/Video /	 9
 3 cd key	 Shift + 3	 9 cd key	 Shift + 9
 RDS PTY Search	 TV/R	 10 Tuner/Video /	 0
 4 Tuner/Video /	 4	 10 cd key	 Menu
 4 cd key	 Shift + 4	 CD 1 Changer	 Guide
 5 Tuner/Video /	 5	 +10 Tuner/Video / Aux	 Shift + Play
 5 cd key	 Shift + 5	 RDS Display Mode	 3D
 Eject CD 2	 Shift + Info	 Tuner	 Red





Original	Replacement	Original	Replacement
 Video	 Green	 Fade Muting	 Mute
 Aux	 Yellow	 Volume -	 Vol -
 CD I<<<	 I<<<	 Volume +	 Vol +
 CD >>>I	 >>>I		
 CD Stop	 Stop		
 CD Play	 Play		
 Deck A Play	 Left		
 Deck A Play	 Right		
 Deck A <<<	 <<<		
 Deck A >>>	 >>>		
 Deck A Stop	 Ok		
 Deck B Play	 Shift + Left		
 Deck B Play	 Shift + Right		
 Deck B <<<	 Shift + <<<		
 Deck B >>>	 Shift + >>>		
 Deck B Stop	 Shift + Ok		
 Deck B Rec Pause	 Rec		

